

• INSTRUCTION MANUAL •



# LUNA BELL TENT

OXFORD 100



 
WHERE WILL YOUR  
ADVENTURE TAKE YOU?



# COMPONENTS CHECKLIST

- TENT WITH ATTACHED GUY ROPES + GROUNDSHEET
- TENT BAG
- RUBBER MALLET
- FULL SET OF STEEL PEGS
- X1 CENTRE POLE
- X1 FLEXI DOOR POLE
- X10 STRAIGHT FIBREGLASS RIB POLES
- INSTRUCTION MANUAL
- SPARES BAG

# PITCHING YOUR LUNA BELL TENT



Unpack your tent and lay it out with the groundsheet floor facing. Make sure the ground is flat and free of any sharp objects. Find the door and rotate to face desired direction.



Keeping the tent fabric on top of the base, stretch the groundsheet to form a perfect circle. Locate elastic rings and use smaller pegs to fix your base down. Spread the ropes and use the sliders to shorten each rope to approx. 1m in length.




Locate the centre pole and bring inside of the tent. Push the pole upwards to the cone (this will be the end with the integrated loop) and erect it vertically; ensuring it's located at the centre points of both the floor and roof.




Connect together each rib (these are the fibreglass straight poles broken down into three parts). One by one, take each erected rib and insert into the pockets located at the top of each wall seam.

# PITCHING YOUR LUNA BELL TENT

 

Secure the full length of the rib to the tent wall by using the velcro to tightly hold into place.

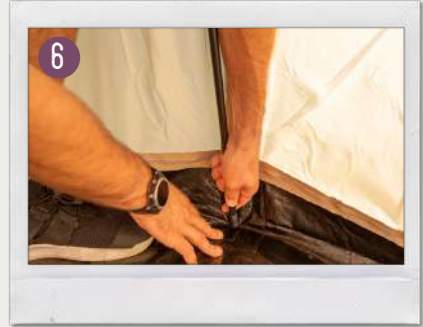

Slot each rib foot firmly on the groundsheet; at the crease point of where the floor ends and wall begins.




Thread the flexi door pole through the sleeve on the door canopy.



Slot the feet of this pole into the black pockets on either side of the door.

# PITCHING YOUR LUNA BELL TENT

 

Zip the door closed and locate the thicker pegs. One by one, peg the guy ropes down at least 1m distance from the tent.



Once all pegs are down, firmly pull on each rope and adjust sliders to create an arch in the wall ribs. Apply the same tension with each rope to create a crease free, rounded finish.




Now it's time to dress your perfectly pitched Luna Bell Tent... We find that layering accessories in triangular groupings works a treat!



It's now time to relax and enjoy your new home away from home. Make use of your Luna Bell's ample internal space with lots of cosy indoor bedding and furniture.

# PACKING DOWN YOUR LUNA BELL TENT

 

It is VITAL that your tent is only stored when it is bone dry. If you store your tent whilst it's damp or wet, it may be affected by mildew.

It's perfectly fine to take down your tent whilst it is still wet. However... you MUST ensure to hang it up to dry within 48 hours. This can be achieved by hanging the tent on a washing line, or equivalent, and leaving it to air dry.



Take poles and pegs out of the tent and if necessary give them a clean and towel dry before packing. Keep the canvas on top of the groundsheet and not in contact with the grass.



Without standing on the canvas, fold the tent in half and back on itself so that it resembles a half moon shape.



Bring the curved edge back on itself so that you are left with a rectangle, and then fold it in half lengthways.



Smoothing and releasing any trapped air as you go, begin tightly rolling the tent forwards. Then, use the straps to secure the rolled up tent together and place into the provided tent bag.

# MAINTENANCE & TLC



## ≧ ACHIEVING PITCH PERFECTION ≦

- Ensure your spot is flat and bump-free, uneven surfaces or hill tops may apply too much uneven tension and result in damage.
- Avoid pitching your tent under trees unless you have a tent protector cover.
- Pitching your tent on a groundsheet protector will not only guide you when erecting your tent, but it will also protect the groundsheet from dirt, water and condensation.
- Before securing down the pegs, zip all doors closed.

 
Kinks and creases in the fabric suggest that the tents tension is uneven and can result in damage which in turn will reduce water repellency. When pitching your tent, ensure that the poles are straight and guy ropes adjusted.

- The groundsheet zip must be concealed and hidden by the skirt of the tent.

## ≧ ONCE IT'S UP... ≦

- Frequently check that the pegs are secured tightly and have not become loose, this is particularly important after wet weather as the grounds will become soft.
- Air your tent out daily to increase the ventilation - this can be done by opening the doors, windows and (if applicable) unzipping the groundsheet and rolling up the sides.
- If you spot any marks, dirt or mildew spots, tackle them right away to prevent the issue from staining or spreading.

# MAINTENANCE & TLC



## ⇒ WATERPROOFING & LEAK PREVENTION ⇐

On the first occasion that your canvas tent ensures heavy rainfall, although unlikely, you may find small leaks around the seams of the fabric, do not worry as this is normal! Once it has fully dried out, the cotton will naturally shrink and close any holes to ensure your tent becomes completely watertight.

## ⇒ CLEANING YOUR TENT ⇐

### POLYESTER/OXFORD

Use a soft sponge or garden sprayer to apply Nixwax Tent and Gear SolarWash to any areas that are affected by dirt or mud.



### CANVAS/COTTON

Use a soft sponge or garden sprayer to apply Nixwax Tech Wash to any areas that are affected by dirt or mud.

## ⇒ PACKING AWAY & STORING YOUR TENT ⇐

- Ensure that both the tent and groundsheet are **BONE DRY** before packing away, this process can be quicker by detaching the groundsheet and hanging it to dry separately.
- Store your tent away in a dry place, free of damp and excessive condensation. We would advise placing it up high so that rodents cannot reach the tent.
- To effectively pack down your tent, follow the pitching instructions in reverse. For a video on this, please scan the QR code below.



## ≡ MAINTENANCE GUIDE ≡

Scan below for full TLC (Tent Love and Care)!



## ≡ LONG TERM CARE ≡

Your tent will have a generous coating of our water, rot and UV repelling agent. Over time, as a result of heavy use or testing environments, your tent fabric may require a second coating to revive its breathability and resistance to the elements. This can be done by using a garden spray to apply the following agents:

### POLYESTER/OXFORD

Nixwax Tent and Gear SolarWash

### CANVAS

Nixwax Cotton Proof

## RETURNS POLICY

We are certain you are going to love your next tent, however, if you have a change of heart you are entitled to a refund or exchange within 14 days of receiving your item/s. Please note, unpackaged or used tents may be subject to this. To make your request, please complete the online returns form on our website:  
[www.boutiquecamping.com/return-form-i524](http://www.boutiquecamping.com/return-form-i524)



# HAVE A CAMPING QUERY?



Email us at [info@boutiquecamping.com](mailto:info@boutiquecamping.com)  
and we'll be happy to assist!

• EST. 2010 •



# LET'S CONNECT!



## WHERE WILL YOUR ADVENTURE TAKE YOU?

...We'd love to see! Whether it's a reel, a pitching time lapse, or a stunning finished set up pic, don't forget to give us a follow and TAG us! Your creation could be featured on our socials & website!



@WEAREBOUTIQUE

@BOUTIQUECAMPING

@WEAREBOUTIQUE

@BOUTIQUECAMPING

@BOUTIQUECAMPING

[www.boutiquecamping.com](http://www.boutiquecamping.com) | +44 (0) 203 319 1315 | [info@boutiquecamping.com](mailto:info@boutiquecamping.com)